

ICS226 Compact Scale



ICS226 Compact Scale

Full stainless steel construction

IP67 Terminal, IP65 Base

Capacities from 3 to 15 kg

Over/Under checkweighing

Easy handling and operation

Robust and reliable

Mobile, Ergonomic, Compact
for Light Wash Down Applications

METTLER TOLEDO

Portable Flexibility in Light Wet & Humid Environments

The ICS226 Compact Scale is an ideal portable scale solution for weighing and portioning in food production and packaging applications. This full stainless steel scale is IP65/IP67 protected and a good fit in any light wash down application with a need for ruggedness and durability.

This scale is designed for efficient out-of-the-box simple weighing applications and optimized for easy and fast checkweighing. Its large, intuitive and

fast LCD-display with an excellent visibility checkweighing indicator speeds up production and helps to prevent manual operation errors.

The ICS226 Compact Scale is front mounting, and together with its duplicated Zero/Tare keys provides for ergonomic handling and operation at all time.



Technical Specifications

Display	6 digit LCD, with white backlight
	Heights 30mm
Approval	OIM, III, 3,000 e
Readability	ICS226: 3,000 d(factory setting), 6,000 d / 7,500 d ICS226/M: 3,000 e acc. to OIML, class III
Power Supply	100 ~ 240 VAC
	6V Ni-MH rechargeable battery 3,800mAh
Ingress Protection	IP65/IP67(Base/Terminal)
Material	Scale: Stainless steel, AISI304
	Load cell: Stainless steel potted
Applications/Features	Simple weighing, Checkweighing, Unit switch
Platform Size	228 x 228 mm




Stainless Steel Load Cell

The advanced and state of the art technology makes this load cell a perfect choice for light wash down applications.



Highest Manufacturing Flexibility

Removable handles and the high quality Ni-MH rechargeable battery make the ICS226 a fully portable and mobile scale for flexible operation everywhere in the facility.

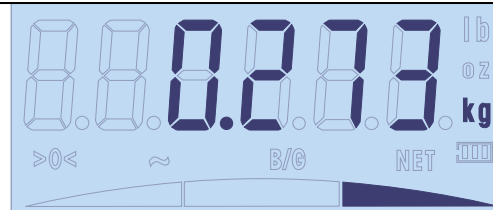

Bright, Easy to Read Display

The ICS226 Compact Scale provides a large and excellent visible LCD-Display and an intuitive graphic checkweighing indicator for outstanding readability.

G: 2.500 kg
 T: 0.300 kg
 N: 2.200 kg

RS232 Interface

Connect to printer to print basic weighing data.




Unique, Ergonomic and Rugged Keypad Design

The high quality membrane keys and the duplicated Zero/ Tare buttons provide a long life time and allow for user adapted handling of the terminal.

Standard Configurations

Power		
Model	Capacity/Readability	Product Size
ICS226-QA3F	3 kg / 0.1 g	375 x 331 x 86 mm
ICS226-QA6F	6 kg / 0.2 g	
ICS226-QA15F	15 kg / 0.5 g	
Internal Rechargeable Battery		
ICS226-QA3FCL	3 kg / 0.1 g	375 x 331 x 86 mm
ICS226-QA6FCL	6 kg / 0.2 g	
ICS226-QA15FCL	15 kg / 0.5 g	

Dimension (mm)

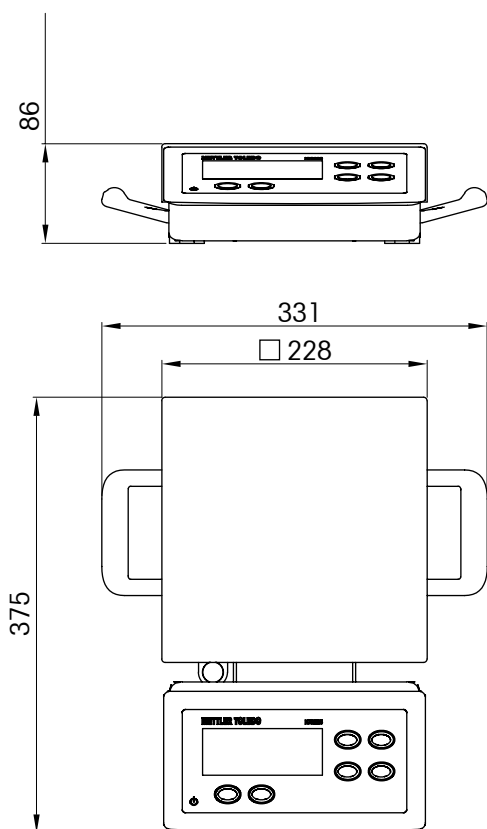

www.mt.com

Visit for more information

METTLER-TOLEDO AG

CH-8606 Greifensee
Switzerland
Phone +41 44 944 22 11
Fax +41 44 944 30 60

Subject to technical changes
© 09/2014 Mettler-Toledo, AG

MTSI 30220393